

## Download

SiecoSmart is available for both iOS and Android. Search the name "SiecoSmart" in App Store or Google Play.

## Download App



Android



iOS

## Add device

Log in the SiecoSmart, select "Add Device", and add the smart camera to the App according to the screen tips (please place the smart camera near the router when setting it up).

NOTE: If you need to re-select the WiFi network, please press and hold the "RESET" button for 5 seconds, the device will restart, and the indicator will be flashing red.



## Functions

### Pan/Tilt

Rotate your camera by sliding on your smartphone, providing you with 360 degrees of vision.

### Video flip

Flip your video stream up or down for maximum flexibility.

### Motion detection

Built-in motion sensors detect movement, and the camera will send you push notifications and app alerts.

### Record

Support 24H continuous recording with high capacity SD storage or Cloud storage.

### Day & Night

Never miss a moment, even in complete darkness, with powerful night-vision technology.



Day



Night



## FAQ

Q: The device cannot be previewed properly?

A: Check whether the network is normal, you can place the camera close to the router, and if not, it is recommended to reset the device and add it again.

Q: Why is it still in the list of devices after resetting?

A: The reset device only resets the network configuration of the camera, but cannot change the configuration on the App, remove the camera, and must be deleted by the App.

Q: How to cut the camera network to another router?

A: First remove and reset the device on the App and then configure the device again by the App.

 
Q: Why doesn't the device identify the SD card?

A: It is recommended to plug in SD card after power cut. Confirm whether the SD card is normally available and the format is FAT32. And the TF card can't be identified when the internet environment is not good.


Q: Why I can't get the notifications with my cell phone App?

A: Please confirm that the App has been running on the phone, and the relevant reminder function has been opened; Message notification and authority confirmation in the mobile phone system have been opened.

## Please consult this checklist for all parts.

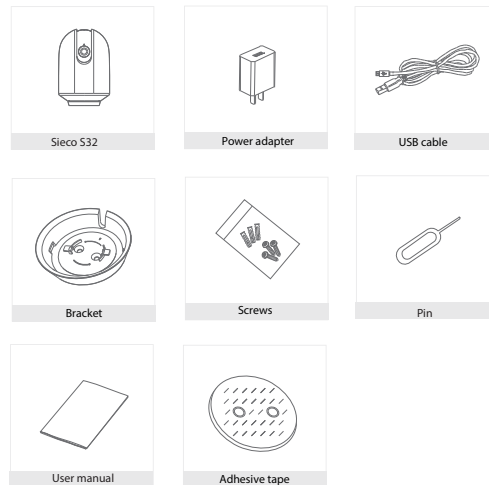

## Description

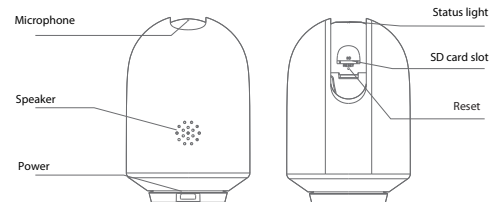 

Power port

DC 5V±10%

Status light

Solid red light on: The camera is turning on or malfunctional  
 Blinking red light: Awaiting WiFi connection (slowly blinking)  
 Connecting Wthe iFi (quickly blinking)  
 Blinking blue light: Currently connecting  
 Solid blue light on: The camera runs correctly

Microphone

Captures sound for your video

SD card slot


Support local SD Card storage (Max. 512Gb)

Reset

Press and hold for 5 seconds with pin to reset the camera (if you have modified settings, they will return to factory defaults)

## Install

 **Mode 1:** Use the included mounting bracket to fix the camera to a clean surface.

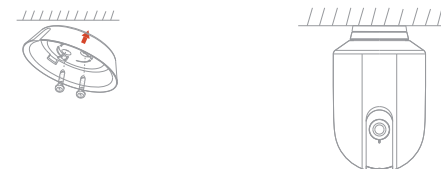

**Mode 2:** Or, stick the camera to an inclined surface with the adhesive tape we provided.

